

<b>NMRA Standard</b>	
<b>Layout Command Control™ (LCC)</b> <b>Memory Configuration</b>	
<b>Apr 25, 2021</b>	<b>S-9.7.4.2</b>

## Adopted as a NMRA Standard

The OpenLCB Standard document appended to this cover sheet has been formally adopted as a NMRA Standard by the NMRA Board of Directors on the date shown in the *Adopted* column in the *Version History* table below.

## Version History

Date	Adopted	Summary of Changes
Feb 17, 2015		Initial version submitted for public comment
Feb 6, 2016	Feb 20, 2016	Minor grammatical corrections and readability improvements as well as the following specific changes: <ul style="list-style-type: none"> <li>• Changes to Remaining Bytes table values in sections               <ul style="list-style-type: none"> <li>◦ <b>4.6 Read Stream Command</b></li> <li>◦ <b>4.7 Read Stream Reply</b></li> <li>◦ <b>4.11 Write Stream Command</b></li> <li>◦ <b>4.12 Write Stream Reply</b></li> </ul> </li> <li>• Changes and additions to sections               <ul style="list-style-type: none"> <li>◦ <b>4.23 Update Complete Command</b></li> <li>◦ <b>4.24 Reset/Reboot Command</b></li> </ul> </li> <li>• Restored sections               <ul style="list-style-type: none"> <li>◦ <b>4.21 Unfreeze Command</b></li> <li>◦ <b>4.22 Freeze Command</b></li> </ul> </li> <li>• Removed section               <ul style="list-style-type: none"> <li>◦ <b>4.26 Enter Bootloader Command</b></li> </ul> </li> </ul>
Apr 25, 2021	<b>July 2, 2021</b>	Changed LCC logo to include the ® symbol Changed “Layout Command Control” to have the ™ symbol Added the NMRA Legal Disclaimer fine-print Changed the OpenLCB license to “Creative Commons Attribution-ShareAlike 4.0 International”

# Important Notices and Disclaimers Concerning NMRA Standards Documents

The Standards (S), Recommended Practices (RP), Technical Note (TN) and Technical Information (TI) documents of the National Model Railroad Association (“NMRA Standards documents”) are made available for use subject to important notices and legal disclaimers. These notices and disclaimers, or a reference to this page, appear in all standards and may be found under the heading “Important Notices and Disclaimers Concerning NMRA Standards Documents.”

## Notice and Disclaimer of Liability Concerning the Use of NMRA Standards Documents

NMRA Standards documents are developed within the Standards and Conformance Department of the NMRA in association with certain Working Groups, members, and representatives of manufacturers and sellers. NMRA develops its standards through a consensus development process, which brings together volunteers representing varied viewpoints and interests to achieve the final product. NMRA Standards documents are developed by volunteers with modeling, railroading, engineering, and industry-based expertise. Volunteers are not necessarily members of NMRA, and participate without compensation from NMRA.

NMRA does not warrant or represent the accuracy or completeness of the material contained in NMRA Standards documents, and expressly disclaims all warranties (express, implied and statutory) not included in this or any other document relating to the standard or recommended practice, including, but not limited to, the warranties of: merchantability; fitness for a particular purpose; non-infringement; and quality, accuracy, effectiveness, currency, or completeness of material. In addition, NMRA disclaims any and all conditions relating to results and workmanlike effort. In addition, NMRA does not warrant or represent that the use of the material contained in NMRA Standards documents is free from patent infringement. NMRA Standards documents are supplied “AS IS” and “WITH ALL FAULTS.”

Use of NMRA Standards documents is wholly voluntary. The existence of an NMRA Standard or Recommended Practice does not imply that there are no other ways to produce, test, measure, purchase, market, or provide other goods and services related to the scope of the NMRA Standards documents. Furthermore, the viewpoint expressed at the time that NMRA approves or issues a Standard or Recommended Practice is subject to change brought about through developments in the state of the art and comments received from users of NMRA Standards documents.

In publishing and making its standards available, NMRA is not suggesting or rendering professional or other services for, or on behalf of, any person or entity, nor is NMRA undertaking to perform any duty owed by any other person or entity to another. Any person utilizing any NMRA Standards document, should rely upon their own independent judgment in the exercise of reasonable care in any given circumstances or, as appropriate, seek the advice of a competent professional in determining the appropriateness of a given NMRA Standards documents.

IN NO EVENT SHALL NMRA BE LIABLE FOR ANY DIRECT, INDIRECT, INCIDENTAL, SPECIAL, EXEMPLARY, OR CONSEQUENTIAL DAMAGES (INCLUDING, BUT NOT LIMITED TO: THE NEED TO PROCURE SUBSTITUTE GOODS OR SERVICES; LOSS OF USE, DATA, OR PROFITS; OR BUSINESS INTERRUPTION) HOWEVER CAUSED AND ON ANY THEORY OF LIABILITY, WHETHER IN CONTRACT, STRICT LIABILITY, OR TORT (INCLUDING NEGLIGENCE OR OTHERWISE) ARISING IN ANY WAY OUT OF THE PUBLICATION, USE OF, OR RELIANCE UPON ANY STANDARD OR RECOMMENDED PRACTICE, EVEN IF ADVISED OF THE POSSIBILITY OF SUCH DAMAGE AND REGARDLESS OF WHETHER SUCH DAMAGE WAS FORESEEABLE.

## Translations

NMRA’s development of NMRA Standards documents involves the review of documents in English only. In the event that an NMRA Standards document is translated, only the English version published by NMRA is the approved NMRA Standards document.

## Official Statements

A statement, written or oral, that is not processed in accordance with NMRA policies for distribution of NMRA communications, or approved by the Board of Directors, an officer or committee chairperson, shall not be considered or inferred to be the official position of NMRA or any of its committees and shall not be considered to be, nor be relied upon as, a formal position of NMRA.

## Comments on Standards

Comments for revision of NMRA Standards documents are welcome from any interested party, regardless of membership. However, **NMRA does not provide interpretations, consulting information, or advice pertaining to NMRA Standards documents.**

Suggestions for changes in documents should be in the form of a proposed change of text, together with appropriate supporting comments. Since NMRA standards represent a consensus of concerned interests, it is important that any responses to comments and questions also receive the concurrence of a balance of interests. For this reason, NMRA, its departments, Working Groups or committees cannot provide an instant response to comments, or questions except in those cases where the matter has previously been addressed. For the same reason, NMRA does not respond to interpretation requests. Any person who would like to participate in evaluating comments or in revisions to NMRA Standards documents may request participation in the relevant NMRA working group.

## Laws & Regulations


Users of NMRA Standards documents should consult all applicable laws and regulations. Compliance with the provisions of any NMRA Standards document does not constitute compliance to any applicable regulatory requirements. Implementers of the standard are responsible for observing or referring to the applicable regulatory requirements. NMRA does not, by the publication of NMRA Standards documents, intend to urge action that is not in compliance with applicable laws, and NMRA Standards documents may not be construed as doing so.

## Copyrights

NMRA Standards documents are copyrighted by NMRA under US and international copyright laws. They are made available by NMRA and are adopted for a wide variety of both public and private uses. These include both use, by reference, in laws and regulations, and use in private self-regulation, standardization, and the promotion of modeling, structural and engineering practices and methods. By making NMRA Standards documents available for use and adoption by public authorities and private users, NMRA does not waive any rights in copyright to the NMRA Standards documents.

## IMPORTANT NOTICE

NMRA Standards documents do not guarantee or ensure safety, security, health, or environmental protection, or ensure against interference with or from other systems, devices or networks. NMRA Standards documents development activities consider research and information presented to the standards development group in developing any safety recommendations. Other information about safety practices, changes in technology or technology implementation, or impact by peripheral systems also may be pertinent to safety considerations during implementation of the standard. Implementers and users of NMRA Standards documents are responsible for determining and complying with all appropriate safety, security, environmental, health, and interference protection practices and all applicable laws and regulations.

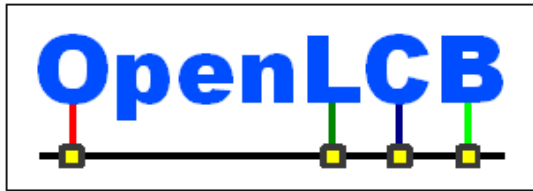

<b>OpenLCB Standard</b>	
<b>Memory Configuration</b>	
<b>Apr 25, 2021</b>	<b>Adopted</b>

## 1 Introduction (Informative)

This Standard defines a protocol for configuring OpenLCB nodes by directly accessing their configuration memory.

## 2 Intended Use (Informative)

- 5 Intended to be used to configure self-contained nodes over their OpenLCB links.

## 3 References and Context (Normative)

This Standard is in the context of the following OpenLCB Standards:

- OpenLCB Configuration Description Information (CDI), which defines fixed information to allow a Configuration Tool (CT) to configure a node.
- 10 • OpenLCB Datagram Transport Protocol, which defines the protocol for transporting 0-72 byte datagrams from node to node.
- OpenLCB Message Network, which defines message interchange for OpenLCB, specifically how this protocol appears in the Protocol Support Reply message and Error Codes.
- 15 • The OpenLCB Stream Transport Standard, which defines the protocol for transporting data from node to node.

## 4 Message Formats (Normative)

- The tables below show available configuration message formats. All other formats are reserved. Note that Byte 6 is sometimes specified as optional. When Byte 6 is specified as optional, and  
20 not used, it is not present in the message, and the remaining bytes directly follow Byte 5 with no Byte 6 padding in between.

### 4.1 Address Space Size

- Configuration memory addresses are 32 bits. The addressable quantity is the byte. There are 256 unique address spaces, which are specified using an address space selectors. Address spaces may  
25 be wholly designated as read-only or write-only by the implementing node. An address space may not be partially designated as read-only or write-only.

### 4.2 Address Space Selection

Of the 256 unique address spaces, those that follow are required to be implemented by any node that implements this Standard (these may or may not have content on a particular node); the

30 following address space numbers can only be used for the specified purpose, and if the corresponding information is available, it must be accessible by these address space selectors (in addition to any others the designer might provide):

- (space=0xFF, control bits=0b0000011) Configuration definition – A read-only space containing the Configuration Description Information for this node, if any.
- 35 • (space=0xFE, control bits=0b0000010) All memory – This special space provides access to all memory in the device, where “all” is defined by the designer.
- (space=0xFD, control bits=0b0000001) Configuration – A writable basic configuration space, with the structure of the 32-bit space defined by the designer.

40 These three spaces, inclusive, can (but do not have to) be addressed without an extra byte in the datagram using control bits in the flag byte (byte 1). All others must be specified as a byte value in byte 6 of the datagram payload (see Section 4.3).

### 4.3 Generic Error Handling

45 The Error Codes returned by failed operations, either in the Datagram Rejected message, or the Failed response datagrams, shall conform to the general Error Code specification as defined by the OpenLCB Message Network Standard.

An unknown command in byte 1 shall return a datagram rejected reply. Nodes may, but are not required to use the error code “Not implemented, subcommand unknown”..

50 Additionally, the following protocol specific enumerated error code extensions (logically or'd into bits 0-3 of the base error code as defined in the OpenLCB Message Network Standard) are defined for use with commands that are supported and known to the node:

- “Permanent error, invalid argument” | 0x0001 – Address space is not known.
- “Permanent error, invalid argument” | 0x0002 – Out of bounds, the address space is valid, however the address within the space is not implemented.
- “Permanent error, invalid argument” | 0x0003 – Write access to a read-only address space.

### 55 4.4 Read Command

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Byte 7/6
0x20	0x40 Space in byte 6 0x41 Space 0xFD 0x42 Space 0xFE 0x43 Space 0xFF	Starting Address	Address Space	Read Count (1 – 64 bytes) Upper bit reserved, must be ignored

In reply to the datagram containing a Read command, the receiving node shall set the Reply Pending bit in the Datagram Received OK message. The receiving node may, but is not required to, include a specific timeout interval in the Datagram Received OK message.

- 60 If the interval is provided and has elapsed without a Read Reply message being returned, the node requesting the Read operation may, but is not required to, repeat the request.

#### 4.5 Read Reply

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	OK status: 0x50 Space in byte 6 0x51 Space 0xFD 0x52 Space 0xFE 0x53 Space 0xFF	Starting Address	Address Space	Data (1 – 64 bytes)
	Failure status: 0x58 Space in byte 6 0x59 Space 0xFD 0x5A Space 0xFE 0x5B Space 0xFF			<ul style="list-style-type: none"> <li>Error Code (two bytes)</li> <li>optional zero-terminated message string (0 – 63 bytes)</li> </ul>

- 65 In general, a read reply may provide less than the requested data, but always at least one byte if it's a valid read. The maximum read request is 64 bytes when reading via datagrams. When reading via streams, any length up to 0xFF,FF,FF,FF (4GB-1) can be requested; a length of 0x0 means “read forever” or until the end of the address space.

Reading at least one byte, but less than the requested amount, due to the length of the address space is not considered an error.

- 70 If the full number of bytes cannot be read for any reason other than the size of the address space, or if no bytes can be read, the Read Reply shall have the Fail bit set and include an error code instead of the requested data.

#### 4.6 Read Stream Command

Byte 0	Byte 1	Bytes 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	0x60 Space in byte 6 0x61 Space 0xFD 0x62 Space 0xFE 0x63 Space 0xFF	Starting Address	Address Space	<ul style="list-style-type: none"> <li>send as 0xFF, ignore on receipt (1 byte)</li> <li>Destination Stream ID (1 byte)</li> <li>Read Count (4 bytes)</li> </ul>

- 75 Very similar to a Read Command, except that a stream is created to carry the read information back to the requesting node. The stream must be established before the Read Reply datagram is sent, so that error codes can be returned via the Read Reply in the stream initialization fails.

The Destination Stream ID provided must be used as the suggested Destination Stream ID in the subsequent OpenLCB Stream Transport protocol Stream Initiate Request.

80 **4.7 Read Stream Reply**

Byte 0	Byte 1	Bytes 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	OK status: 0x70 Space in byte 6 0x71 Space 0xFD 0x72 Space 0xFE 0x73 Space 0xFF	Starting Address	Address Space	<ul style="list-style-type: none"> <li>Source Stream ID (1 byte)</li> <li>Destination Stream ID (1 byte)</li> <li>Read Count (4 bytes)</li> </ul>
	Failure status: 0x78 Space in byte 6 0x79 Space 0xFD 0x7A Space 0xFE 0x7B Space 0xFF			<ul style="list-style-type: none"> <li>Error Code (2 bytes)</li> <li>optional zero-terminated message string (0 – 63 bytes)</li> </ul>

85 The Destination Stream ID must match the Destination Stream ID used in both the Read Stream Command and the subsequent stream that was created as a result of the Read Stream Command. The Source Stream ID must match the Source Stream ID used in the subsequent stream that was a result of the Read Stream Command. The Read Stream Reply shall be sent after the stream has been established, but before any data has been sent using the stream. When the stream successfully closes, after having read 1 or more bytes, the transaction is considered complete. If the stream closes with an error, this transaction is considered to be in error.

90 Should an error occur prior to or during the establishment of the stream, the Read Stream Reply shall indicate a failure with the error code set appropriately.

**4.8 Write Command**

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes
0x20	0x00 Space in byte 6 0x01 Space 0xFD 0x02 Space 0xFE 0x03 Space 0xFF	Starting Address	Address Space	Data (1 – 64 bytes)

95 If the write operation can be done immediately and succeeds, only the Datagram Received OK message reply to the Write Command datagram is returned. The Reply Pending bit is not set in the Datagram Received OK reply.

100 If the write operation takes time, or fails immediately, the Datagram Received OK message reply to the Write Command datagram shall carry the Reply Pending bit set. The receiving node may, but is not required to, include a specific timeout interval in the Datagram Received OK message. This is followed later by the receiving node sending a Write Reply datagram with either OK or Fail set. If Fail is set, the error code shall be included. The optional message string may be, but is not required to be, included.

If a timeout interval was provided and has elapsed without a Write Reply message being returned, the node requesting the Write operation may, but is not required to, repeat the request.

#### 4.9 Write Reply

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	OK status: 0x10 Space in byte 6 0x11 Space 0xFD 0x12 Space 0xFE 0x13 Space 0xFF	Starting Address	Address Space	(None)
	Failure status: 0x18 Space in byte 6 0x19 Space 0xFD 0x1A Space 0xFE 0x1B Space 0xFF			<ul style="list-style-type: none"> <li>Error Code (two bytes)</li> <li>optional zero-terminated message string (0 – 63 bytes)</li> </ul>

105 This message is sent in only if the Reply Pending bit in the Datagram OK message reply to a previous Write Command is set. If the write fails, a Failure Status reply is sent with the Error Code set appropriately.

#### 4.10 Write Under Mask Command

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes
0x20	0x08 Space in byte 6 0x09 Space 0xFD 0x0A Space 0xFE 0x0B Space 0xFF	Starting Address	Address Space	Data pairs (2-64 bytes)

110 The data pairs are (Mask, Data) where each of Mask and Data are single bytes. Bits in Data where the corresponding bit in Mask is a 1 will be written to the memory location. Bits in memory where the corresponding bit in Mask is a 0 will be left unchanged. The first data pair refers to memory at the Starting Address. Each following data pair refers to a successive byte in memory.

115 The Write Under Mask Command requires a response consistent with that of a standard Write Command whereby the Reply Pending bit in the Datagram OK reply determines if a subsequent Write Reply will occur.

### 4.11 Write Stream Command

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	0x20 Space in byte 6 0x21 Space 0xFD 0x22 Space 0xFE 0x23 Space 0xFF	Starting Address	Address Space	<ul style="list-style-type: none"> <li>Source Stream ID (1 byte)</li> </ul>

120 After sending this command, and receiving Datagram OK, an OpenLCB Stream Transport protocol Stream Initiate Request will be sent. The destination node is not required to accept the subsequent stream, however, once the Write Stream Command has received a Datagram OK reply, the destination node has committed itself to sending a Write Stream Reply with the appropriate success or failure with error code. If the Datagram OK reply has the Reply Pending bit set, it may use any timeout value (if provided) to wait for the Write Stream Reply. Any timeout shall be from the time of the last stream shutdown message and is provided for the receiving node to commit data to memory.

125 The destination node may reject the operation immediately with a Datagram Rejected response and the error code set appropriately. In this case, no stream will be established, and a Write Stream Reply is not required or expected.

### 4.12 Write Stream Reply

Byte 0	Byte 1	Byte 2-5	Byte 6 (optional)	Remaining Bytes (in network order, top to bottom)
0x20	OK status: 0x30 Space in byte 6 0x31 Space 0xFD 0x32 Space 0xFE 0x33 Space 0xFF	Starting Address	Address Space	<ul style="list-style-type: none"> <li>Source Stream ID (1 byte)</li> <li>Destination Stream ID (1 byte)</li> <li></li> </ul>
	Failure status: 0x38 Space in byte 6 0x39 Space 0xFD 0x3A Space 0xFE 0x3B Space 0xFF			<ul style="list-style-type: none"> <li>Error Code (two bytes)</li> <li>optional zero-terminated message string (0 – 63 bytes)</li> </ul>

130 The Destination Stream ID must match the Destination Stream ID used in both the Read Stream Command and the subsequent stream that was created as a result of the Read Stream Command. The Source Stream ID must match the Source Stream ID used in the the subsequent stream that was a result of the Read Stream Command. The Read Stream Reply shall be sent after the stream has been established, but before any data has been sent using the stream. When the stream successfully closes, after having read 1 or more bytes, the transaction is considered complete. If the stream closes with an error, this transaction is considered to be in error.

135



Should an error occur prior to or during the establishment of the stream, the Read Stream Reply shall indicate a failure with the error code set appropriately.

### 4.13 Get Configuration Options Command

Byte 0	Byte 1
0x20	0x80

140

### 4.14 Get Configuration Options Reply

Byte 0	Byte 1	Byte 2-3	Byte 4	Byte 5	Byte 6 (Optional)	Remaining Bytes (Optional)
0x20	0x82	Available Commands	Write Lengths	Highest Address Space	Lowest Address Space	Name String

145

- Available operations mask (2 bytes, bit coded): Indicate which operations are available so the using software can know whether convenience operations (which are not possible on some hardware) are available.
  - 0x8000 Write under mask supported
  - 0x4000 Unaligned reads supported. If not set, reads have to start on an address with the low bits, as given by the data size, all zero. For example a 4-byte write must have the low two address bits zero.
  - 0x2000 Unaligned writes supported. If not set, reads have to start on an address with the low bits, as given by the data size, all zero. For example a 4-byte write must have the low two address bits zero.
  - 0x0800 Read from address space 0xFC available (this is the manufacturer part of Abbreviated CDI)
  - 0x0400 Read from address space 0xFB available (this is the user-entered part of Abbreviated CDI)
  - 0x0200 Write to address space 0xFB available (this is the user-entered part of Abbreviated CDI)
  - Others reserved, must be ignored on receipt and sent as zero.
- Write lengths supported (One byte, bit coded): (provided for devices that can only write certain sizes to memory) (at least one bit must be set)
  - 0x80 1 byte write
  - 0x40 2 byte write
  - 0x20 4 byte writes

150

155

160

- 165
  - 0x10 64 byte writes (full datagram, but not 63 bytes or arbitrary length, just exactly 64)
  - 0x02 arbitrary writes of any length OK
  - 0x01 stream writes supported (stream support will identify buffer size)
  - Others reserved, must be ignored on receipt and sent as zero.
- 170
  - Highest Address Space (byte): Highest number space available. Not all up to that need be available, but sparse allocation will slow down the process as “Get Address Space Information” is needed to determine whether they are present.
  - Lowest Address spaces (byte): Lowest number space available. Note that spaces 0xFD, 0xFE and 0xFF are assumed to be included even if the low space ↔ high space range doesn't include them. (also 0xFC, 0xFB of Abbreviated Default CDI if bits indicate they're available)
- 175 A node that only has the high spaces could have Highest Address Space = 255, Lowest Address Space = 253 or 251.

A node that has additional low address spaces, e.g. to make more memory available with a 39-bit address, could have Highest Address Space = 127, Lowest Address Space = 0 and leave the top spaces assumed.

180 **4.15 Get Address Space Information Command**

Byte 0	Byte 1	Byte 2
0x20	0x84	Address Space

**4.16 Get Address Space Information Reply**

Byte 0	Byte 1	Byte 2	Byte 3-6	Byte 7	Byte 8-11	Remaining
0x20	0x86 0x87	Address Space	Highest Address	Flags	Lowest Address	Description

- Command (Byte 1)
  - 185 • Byte 1 – 0x87: present, else if 0x86: not present
- Address Space (Byte 2) – provided to identify request this reply is in response to
- Highest Address (Bytes 3 - 6)
- Flags (Byte 7)
  - Bits 7..2 – Reserved
  - 190 • Bit 1 – 0b0: low address is zero, else if 0b1: low address specified in next four bytes
  - Bit 0 – 0b0: writable, else if 0b1: read-only

- Lowest Address (Bytes 8 - 11) – optional, omit if zero, as that will let reply fit in single CAN frame; if present, “non-zero lowest address” bit in prior byte must be 1.
- Description (Bytes 12+, variable length) – optional null-terminated string giving the user-readable name of this space

195

#### 4.17 Lock/Reserve Command

Byte 0	Byte 1	Byte 2-7
0x20	0x88	Reserving Node ID

200

At the start of configuration, a configuring node sends a Lock message with its NodeID. If no node has locked this node, indicated by zero content in the lock memory, the incoming NodeID is placed in the lock memory. If a node has locked this node, the non-zero NodeID in the lock memory is not changed. In either case, the content of the lock memory is returned in the reply. This acts as a test and set operation, and informs the requesting node whether it successfully reserved the node. To release the node, repeat the lock operation with a zero Node ID. The lock memory is set to zero when the node is reset. Note that this is a voluntary protocol in the configuring nodes only; the node being configured does not change its response to configuration operations when locked or unlocked.

205

#### 4.18 Lock/Reserve Reply

Byte 0	Byte 1	Byte 2-7
0x20	0x8A	Reserved Node ID

#### 4.19 Get Unique ID Command

Byte 0	Byte 1	Byte 2
0x20	0x8C	Number requested (1-8, 3 bits); upper bits reserved and must be ignored

210

Nodes maintain a list of unique Event IDs for use in configuration. These are allocated based on the node's unique Node ID. This command allows a configuration tool to get new unique Event IDs from the node's pool, for example to interact with the Blue/Gold configuration process. Each request must provide a different Event ID, without repeat, even through node resets and factory resets.

#### 4.20 Get Unique ID Reply

Byte 0	Byte 1	Remaining Bytes
0x20	0x8D	1-8 requested Event IDs, a total of 8-64 bytes

215

### 4.21 Unfreeze Command

Byte 0	Byte 1	Byte 2
0x20	0xA0	Address Space

220 This command is used in conjunction with the Freeze Command if, only if, and as required by a higher-level protocol specification. An example of such protocol specification is the Firmware Upgrade Standard.

The receiving node may acknowledge this and the Freeze Command either with a Node Initialization Complete or a Datagram Received OK response.

### 4.22 Freeze Command

Byte 0	Byte 1	Byte 2
0x20	0xA1	Address Space

### 225 4.23 Update Complete Command

Byte 0	Byte 1
0x20	0xA8

230 This command notifies the target node that the configuration update operation sequence has completed. Nodes do not have to require this operation, but receiving it must be permitted. Configuration tools should send it at the end of operations. Nodes may, but are not required to, reset as part of the processing of this message. The receiving node may acknowledge this command with a Node Initialization Complete instead of a Datagram Received OK response.

### 4.24 Reset/Reboot Command

Byte 0	Byte 1
0x20	0xA9

235 After successfully processing this command, the receiving node shall reset/reboot into its power on reset state, as if it has been put through a power cycle.

The receiving node may acknowledge this command with a Node Initialization Complete instead of a Datagram Received OK response.

### 4.25 Reinitialize/Factory Reset Command

Byte 0	Byte 1	Byte 2-7
0x20	0xAA	Node ID

- 240 “Reinitialize/Factory Reset” restores the node's configuration as if factory reset. Node ID shall carry the destination Node ID for redundancy.

The receiving node may acknowledge this command with a Node Initialization Complete instead of a Datagram Received OK response.

## Table of Contents

1 Introduction (Informative).....	1
2 Intended Use (Informative).....	1
3 References and Context (Normative).....	1
4 Message Formats (Normative).....	1
4.1 Address Space Size.....	1
4.2 Address Space Selection.....	2
4.3 Generic Error Handling.....	2
4.4 Read Command.....	2
4.5 Read Reply.....	3
4.6 Read Stream Command.....	3
4.7 Read Stream Reply.....	4
4.8 Write Command.....	4
4.9 Write Reply.....	5
4.10 Write Under Mask Command.....	5
4.11 Write Stream Command.....	6
4.12 Write Stream Reply.....	6
4.13 Get Configuration Options Command.....	7
4.14 Get Configuration Options Reply.....	7
4.15 Get Address Space Information Command.....	8
4.16 Get Address Space Information Reply.....	8
4.17 Lock/Reserve Command.....	9
4.18 Lock/Reserve Reply.....	9
4.19 Get Unique ID Command.....	9
4.20 Get Unique ID Reply.....	9
4.21 Unfreeze Command.....	10
4.22 Freeze Command.....	10
4.23 Update Complete Command.....	10
4.24 Reset/Reboot Command.....	10
4.25 Reinitialize/Factory Reset Command.....	10